

Vista S1

Control Consoles

TBJLT121.doc



Date: 02 April 2008

Vista S1 Flatcable Connectors

Jands has observed that when unplugging flatcable connectors with 2mm pin spacing, there is a tendency for the socket housing to come away from the flatcable when both the PCB header's locking wings are not released simultaneously.

To prevent damage to the flatcables, always ensure that when unplugging any flatcable connector, both locking wings must be released simultaneously.

